




ASSEMBLY INSTRUCTION

Manufactured for Rooms To Go


KTCL KM.A071 ACCENT CHAIR
SKU 18530712 18530724 18530736 18530748
18530750 18530762

Step 1.

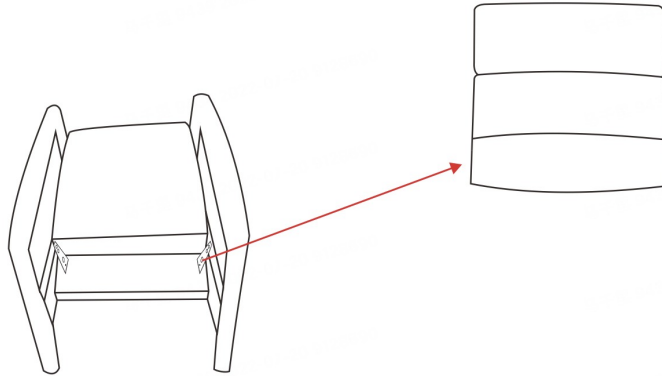


Install the Backrest into the Seat by positioning female metal receiver brackets over male metal posts.

Step 2.

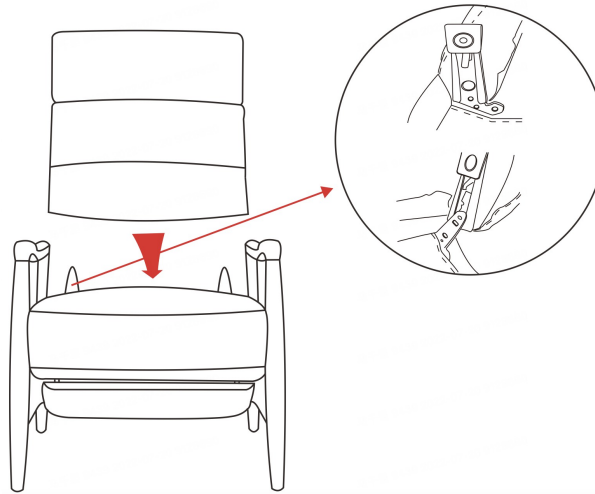

Push down to install the backrest into the seat, make sure each side is locked into place .

Step 3.

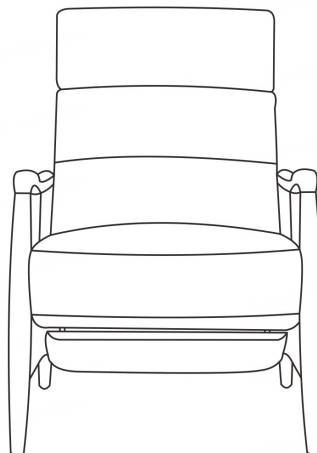

Finished